



A Closer Look



Charging




BEFORE FIRST USE

ECHO is cordless and rechargeable. Before use, charge fully for 24 hours. ECHO can run up to 60 minutes on a single charge.

CHARGING

To recharge, connect the small end of the Charging Cord into the port on the bottom of ECHO. Then connect the USB end of the charging cord into a USB port on a computer or USB wall adapter and plug into an electrical outlet. When the ECHO's battery needs charging, the Power Indicator Light will flash red. When battery power runs out, ECHO will power off. As the battery charges, the flashing red light will turn solid red, and then green when the device is fully charged and ready for use. Recharge the ECHO only as needed for 8 hours. **DO NOT** overcharge which can shorten battery life. Disconnect the USB Cord from the power source when not charging. **DO NOT** charge ECHO for more than 30 continuous hours.

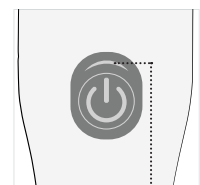Charge
Indicator
Light


DO NOT twist Brush Heads on or off the ECHO Handle. To attach, push Brush Head onto Handle and to remove, Pull Brush Head away from Handle.

Usage Guide

READY TO USE



1. Secure your hair away from your face before you begin your makeup application.
2. With the Brush Head attached, Press the Power/Speed Control Button to activate your ECHO and select the speed setting you would like to use. Low, Medium, High. To deactivate ECHO, press and hold the button for 2 seconds.

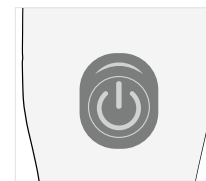

3. You can use ECHO for every step of your makeup routine. ECHO expertly applies, foundation, powder, blush, contour and highlight. ECHO is compatible with liquid, powder, gel, cream and mineral makeup.
4. For liquid application: you may choose to apply a couple of dots onto the skin and then use ECHO to flawlessly blend out over the entire face and neck. Or, you may choose to apply liquid makeup directly onto the Brush Head. **TIP:** ECHO should be powered OFF if applying makeup to Brush Head and not activated until ready for use.



Expert Advice



1. For powder makeup application, make sure ECHO is powered OFF and gently swirl the Brush Head into a compact or into a lid of loose makeup. Tap off excess product and power on your ECHO. Glide ECHO all over the face and neck for a perfectly seamless finish.

2. **Which speed should I select?** ECHO comes with 3 speed settings so that you can personalize your makeup application. You may use any speed for any step of your makeup routine. We have provided a general guide below.

- **Liquid Foundation** - Medium or High Speed
- **Setting Powder** - High Speed
- **Blush** - Low or Medium Speed
- **Contour** - Low or Medium Speed
- **Highlight** - Medium or High Speed.

LOW



MEDIUM




HIGH




Expert Advice

3. **One brush for every step of your makeup routine.** You will find it helpful to dab any excess product from the Brush Head onto a paper towel between steps.

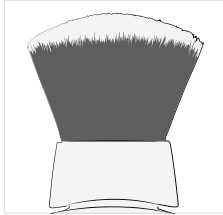

4. **How long do the brushes last?** ECHO's brushes have a patented antimicrobial protection that guards itself against 99% of stain and odor causing bacteria. ECHO's antimicrobial Brush Heads should be replaced one time per year.

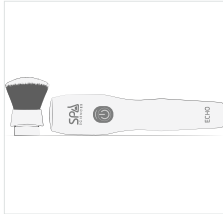

5. **How do I clean the Brush Heads?** ECHO'S Brush Heads detach for easy cleaning. You may clean your brush head with mild soapy water or use a makeup brush cleaner. Rinse off & pat dry on a paper towel. Allow the brush head to completely air dry before next use.

Warnings & Warranty

Warnings:

1. **DO NOT** place or store the ECHO or USB Cord where it can fall or be pulled into a tub, sink, water or other liquid.
2. **DO NOT** reach for the ECHO or USB Cord that has fallen into water. Disconnect immediately.
3. **DO NOT** use the product while plugged in to charge.
4. Close supervision is necessary when this Product is used by, on, or near children or physically challenged persons.
5. Use this Product only for its intended use as described in these Instructions for Use. **DO NOT** use attachments other than those recommended and provided by SPA SCIENCES.
6. Keep the ECHO and USB Cord away from heated surfaces.
7. **DO NOT** use this Product outdoors or where oxygen is being administered.
8. Never operate this Product if it is damaged.
9. **DO NOT** use the USB Cord for recharging if the USB Cord is damaged or if the USB Cord has been dropped on the ground or into water.
10. The Handle of this product and USB Cord have no serviceable parts. Never attempt to open the Handle for any reason. If the USB Cord is damaged, it must be unplugged and replaced. Email customer service at customerservice@spasciences.com for instructions on how to obtain a replacement.
11. Use this Product with the supplied USB Cord only.

Warranty:

Your warranty is not effective unless you register the Product within 90 days of purchase. To register go online to www.warrantyspasciences.com and complete the information required for registration.

For a period of two (2) years from the date of purchase, Spa Sciences LP (the "Company") warrants the ECHO Sonic Makeup Brush (the "Product") against damage, defects or failure resulting from ordinary consumer use under normal home conditions according to the instructions included with the Product (a "Covered Defect").

Warranty

This warranty DOES NOT include damage, defects or failure caused by misuse or improper care of the Product; impact or insertion of foreign objects into or on the Product; application of harmful chemicals or abrasives to the Product; failure to follow manufacturer's instructions; normal wear and tear; alteration or overuse of the Product; or any professional or commercial use of the Product. If there is a Covered Defect during the two (2) years warranty period the Company agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of this limited warranty. Any claim for breach of this limited warranty must be commenced within two (2) years following the original purchase. This limited warranty applies only to a purchase of the Product from or an authorized reseller, is valid for the original end user of the Product only and cannot be transferred under any circumstances.

THE PROVISIONS OF THE FOREGOING WARRANTIES ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR INDIRECT DAMAGES BASED UPON ANY LEGAL THEORY. SOME STATES DO NOT ALLOW LIMITS ON WARRANTIES, OR ON REMEDIES FOR BREACH IN CERTAIN TRANSACTIONS. IF APPLICABLE LAW DOES NOT PERMIT THE DISCLAIMER OF IMPLIED WARRANTIES, THEN THE DURATION OF SUCH IMPLIED WARRANTIES, ARE EXPRESSLY LIMITED TO THE DURATION OF THE EXPRESS LIMITED WARRANTY SET FORTH HEREIN.

Additional Info

The entire Operating manual including safety, care and warranty information is available at www.echo-manual.com

Email customer service at customerservice@spasciences.com